

Camera	Model	Battery	Item no.	Camera	Model	Battery	Item no.
Canon	S100/S110/S200/S230/S300/S330/S400/S410/S500	NB-1L, VCL003	353001	SONY	CCD-SC5/CCD-SC SERIES/CCD-TR1/TR200/TR215/TR3/TR300/TR3000/TR3300/TR416/TR500/TR516/TR517/TR57/TR67/TR818/TR87TR910/TR917/TR930/TR940/TRT97/TRV119/ TRV15/TRV16/TRV215/TRV25/TRV3000/TRV315/RV35/TRV36/TRV37 H18/TRV4/TRV41/TRV43/TRV46/TRV51/TRV517/TRV57 H18/TRV58/TRV615/TRV62/TRV65/TRV66/TRV67/TRV68/TRV715/TRV716/TRV72/TRV720TRV75/TRV78E/TRV81/ TRV815/TRV82/TRV85/TRV87/TRV88/TRV93/TRV95/TRV98/TRV99/DCM-M1/DCR-SC100/TR7000/TR7 SERIES/TRU47E/TRV103/TRV110/TRV120/TRV130/TRV310/TRV315/TRV320/TRV510/TRV520/ TRV525/TRV7/TRV720/TRV820/TRV9/TRV900/TV900/TV900E/VX1000/VX2000/VX700/VX9 SERIES, DSC-CD250/CD400/CD-D700/D770, DSR-200/300/PD100A, GV-A500/A500E/D200/D800, MVC-CD1000/FD5/FD51/FD7/FD71/FD73/FD75/FD81/FD83/FD87/FD88/FD90/FD91/FD92/FD97, PLM-100, HDR-FX1,	353001	
Canon	S100/S110/S200/S230/S300/S330/S400/S410/S500	NB-1LH, VCL003	353001				
Canon	Elura 40MC/50, Optura 400/500 Camcorders & S30/S40/S50/S60/S70 Digital Cameras	NB-2L, VCL004	353012				
Canon	ELURA 40 MC/IXY DV3/MV5i MC	NB2F12 NIL	353012				
Canon	Canon PowerShot G1/G2/G3/G5/BP-511/512/522/535	VCL002/005	353003				
Casio	EX-S1/S2/S3/M1/M2/Z3/Z4	NP-20, VAL001	353019				
Casio	EXILIM EX-Z3, QV-R3, QV-R4	NP-30, VFL001	353019				
Fuji	FinePix 402/F700/F410/F601/F610/F610 Zoom/F700 Zoom/F710/F810/F455	NP-40, VFL004	12956/ 12946/12947/ 12958/353012/ 353025				
Fuji	FinePix 50i/601/F401/F401/F410/F601/F601Z/F601 Zoom/F700 NP-60	VFL001	353013				
Fuji	4900Zoom, MX-1700/2700/2900	NP-80, VFL002	353007				
Fuji	MX600/MX-600/MX-600X/MX700	NP-100, VFL003	353008				
Kodak	DC4800 Zoom/KLIC-3000	NIL	353017	SONY	DCR-DC18/DC20/DC30/DC40/DC65/DC85	NP-F720/F730, NIL	354012
Kodak	EasyShare DX6490/DX7630/DX7590/KLIC-5000	NIL	353013	SONY	CCD-SC5/TR1/TR200/TRU47E/TR300/TR3000/500/517/910/940/V62/TRV119/615/15/16/25/36/37Hi8/4/3000/41/43/46/51/57Hi8,MVC-FD85/FD90/FD95	NP-F750/750SP, NIL	354012
Konica	KD-400Z/Digital Revio KD-500Z/DiMAGE G500/DiMAGE G530/Revio KD-310Z	DR-LB4, VKL001	353017	SONY	Hdr-fx1, Dcr-vx2100/1000e, Ccd-tr3, Ccd-sc5	NP-F930, NIL	354008/13006
Minolta	Dimage X/Xg/Xt	NP-200, VML001	354025	SONY	DCR-TR 7000/7100/8100/8000/110/120/125/130/210/210E/220/TRV 235/310/320/410/420/5/510/520/620/7/7000/7100/720/820/890/9/900, DCR-VX 2000, DSR-PD 150	NP-F950/F960, NIL	354043/35400
Nikon	Coolpix Models: 5700/5000/4500/4300/995/885/880/775	EN-EL1, VNL001	353010	SONY	DCR-VX1000 & DCR-VX700	NP-F730H, NIL	354008/13006
Nikon	Coolpix 2500/3500/SQ	EN-EL2, VNL002	353018	SONY	CCD-TRV108/TRV118/TRV128/TRV138/TRV308/TRV318/TRV328/ TRV338/TRV608, DCR-DVD100, DCR-DVD101/200/201/300/301/PC100/101/105/110/115/120BT/330/9, DCR-TRV10/11/140/17/18/19/20/22/230/240/25/250/260/27/280/30/33/330/340/350/360/38/39/460/480/50/530/6/70/730/740/8/80/830/840/950, DSC-F707/F717/F828/S30/S50/S70/S75/S85, DSR-PDX10, GV-D1000, MVC-CD200/250/300/350/400/500	NP-FM50, VSL002	354014
Olympus	CAMEDIA C-5000 Zoom/C-60ZOOM/C-7000/C70 Zoom/C-760 Ultra Zoom/C-765 Ultra Zoom/C-770 Ultra Zoom/u-15 DIGITAL/u-20 DIGITAL/u-25 DIGITAL/u-30 DIGITAL/X-1/X-2/X-3(Japan), CAMEDIA X-500/D-590 Zoom (US)/C-470 Zoom (Euro) i:robe IR-500 DIGITAL 500/Stylus 300/400/410 Digital/C-50/u-410 DIGITAL	DB-L10, VYL001	353021	SONY	DSC-F77/FX77/P2/P3/P5/P7/P9	NP-FC10, VSL004	354023
Panasonic	SV-AV10/AV20/AV30	CGA-S301A, NIL	353013	SONY	DSC-P1/P20/P30/P50/P55/P505/F505/F505V/F50V/F55/S30/PC1/PC2/PC3/PC4/PC5/PC6/PC9/PC110/TRV1/TRV6/TRV8/TRV10/TRV11/TRV17/TRV20/TRV30/TRV130/TRV230/TRV330/TRV530/TRV730/TRV830/TRV900/VX2000/TRV58/TRV68/TRV88/TRV98/TR818/CCD-CR1	NP-FS11, VSL003	35402
Panasonic	Panasonic Lumix DMC-LC5/LC40	CGR-S602, VPL004	353015				
Panasonic	NV-GS10/NV-GS100K/NV-GS10EG/NV-GS10EGA/NV-GS10EGR/NV-GS10EGS/NV-GS30/NV-GS30B/NV-GS40/NV-GS40B/NV-GS50/NV-GS50B/NV-GS50K/NV-GS55/NV-GS55K/NV-GS70/NV-GS70B/NV-GS70K/PV-GS120/PV-GS200/PV-GS33/PV-GS50/PV-GS50S/PV-GS55/PV-GS70/VDR-M30/VDR-M30K/VDR-M50/VDR-M70	VW-VBD21, NIL	354002				
Pentax	Digimax U-CA3/Optio 330/330RS/430/430RS/450/550	D-LI2, NIL	353013				
Pentax	Optio 330/430/450/550	D-L12, NIL	353013				
Pentax	Pentax Optio 450/550	D-L17, VPEL002	353024				
Pentax	Pentax Optio S/SV/S4/S4i/S5i/X	D-L18, VPEL001	353023				
Ricoh	Caplio RR10/Kodak EasyShare One	DB-40, NIL	353013				
Ricoh	Caplio G3S/G4 wide/RR10/RR10/RR30/RX/GX	DB-43, NIL	201006/ 201025/ 201036/ 201041/ 201049/ 202013/ 202042/ 202053/ 202050				