

INSTRUCTIONS AND WARNINGS

Thank you for purchasing the battery. To ensure your safety, please read this instruction manual before use, and keep it handy for future reference.

- Use this battery with the original charger.
- Do not charge if the battery is wet or damaged and keep away from moisture.
- Do not incinerate or dispose of in a fire
- Do not open or attempt to modify the battery.
- Keep the battery terminals clean by rubbing with a dry cloth or white pencil eraser.
- Suggest you charging NiMH/Ni-CD batteries and packs at least every six months, otherwise NiMH/Ni-CD battery will reduce capacity or dead. For safety reason, we usually ship the battery without fully charged. You must charge NiMH/Ni-CD battery before use, and allow 3-5 cycles of charging and discharging for battery capacity to recovered.

FOR LITHIUM ION(LI-ION) AND LITHIUM POLYMER(LI-PO) BATTERIES

- Li-Ion and Polymer battery & packs may explode and cause fire if misuse or defective. We require all Li-ion batteries & packs buyers must be professionals and have capability to handle emergency.
- If the battery have problem, please don't try to fix it. you'd better contact your retailer for assistance.
- This battery chemistry does not have any "memory" problems and can be charged at any time. You should charge this battery before first use. If the battery is stored long term without use it should charged at around 50% capacity for maximum longevity.
- Do not charge on the charger if its charging current $\geq 4.5A$.

This battery should not be forced into the appliance. If it doesn't fit easily then please contact the retailer from where it was purchased. Should you believe that this product is faulty please contact your retailer as this new product is covered by warranty.

DISCLAIMER

Names, brands or trademarks mentioned on this packaging or product are for identification purposes only.

All trademarks, brands, and copyrights are the property of their respective owners.